

HBADA OFFICE STORE SERVICE

US:service@hbada.com

EU:service@hbada.eu

UK:service@hbada.uk

JP:service@hbada.jp

CA:service@hbada.ca

AU:service@hbada.au

HBADA AMAZON STORE SERVICE

US:customerservice@hbada.com

EU:customerservice-eu@hbada.com

JP:customerservicejp@hbada.com



Scan the QR code to contact us.

HBADA



X701

Precautions for installation

1. Check whether all accessories are included and whether any accessories are missing or damaged.
2. Select a spacious and clean site for installation. Spread paper on the ground to avoid collisions between components and the floor during installation.
3. Please note that once the gas lift is installed, it is difficult to remove. If the chair needs to be disassembled for moving, gently tap the top of the air bar several times with a rubber hammer before removing the base. Then continue to gently tap the five-star foot, and use the principle of vibration to make the air pressure rod fall off. Use caution to avoid injury, as tools are required for this operation.

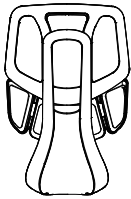
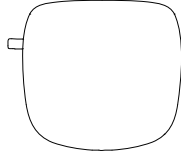
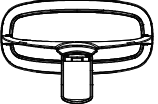
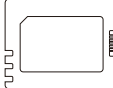
 
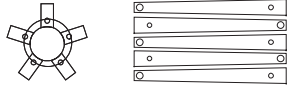
(Any damage caused by this operation is not covered by the product warranty. Please operate with care.)

Usage Precautions

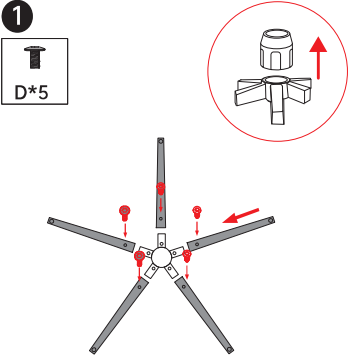
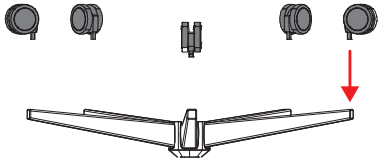
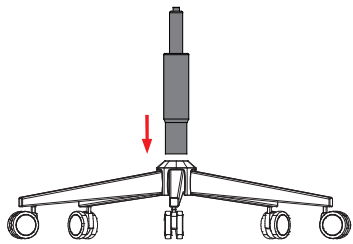
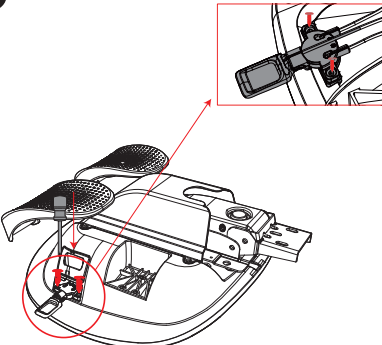
1. When cleaning or performing maintenance, please wipe the chair with a soft cloth.
2. Avoid use in damp or smoky areas, and avoid prolonged exposure to direct sunlight.
3. Do not disassemble parts of the chair or attempt repairs unless you are a qualified professional.

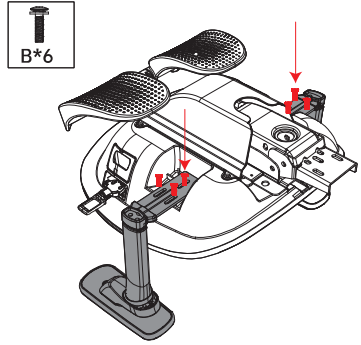
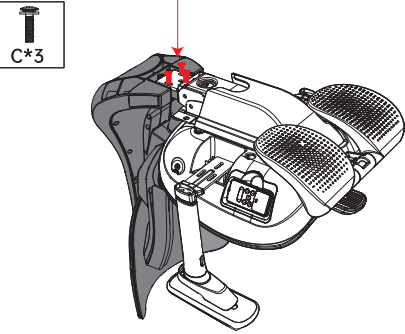
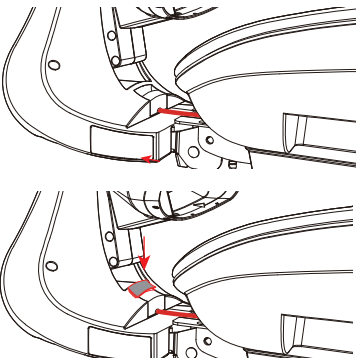


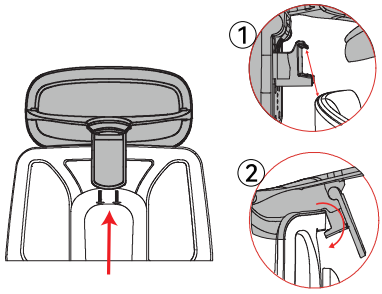
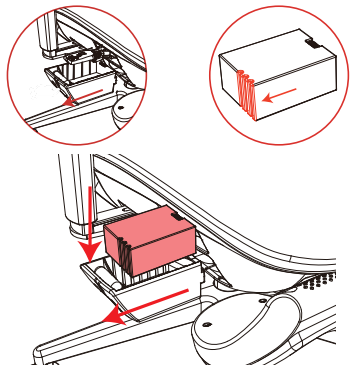
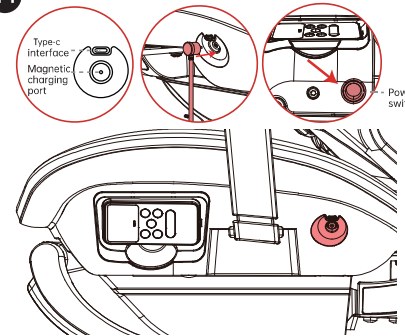
Scan the QR code to watch the installation and operation video

Assembly parts list			
			
Backrest x1	Seat cushion x1	Gas cylinder x1	Headrest x1
			
Armrest x1	Wheels x5	Battery x1	Power Adapter x1
	 The screwdriver is in the accessory box.		
A1*1	A2*1	B*6	C*3
			
D*5	Baser x1		

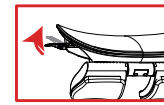
Instruction for Installation

1 	2 
Lift up the star base cover and remove it. Insert each leg into the center hub. Secure with the D screws, then reattach the cover.	Turn the assembled star base upside down. Insert the casters into the mounting holes on each leg; rotating the casters may help with insertion.
3 	4 
Ensure the star base sits flat on the ground, then insert the gas lift into the mounting hole of the base.	Remove the screws pre-installed on the seat frame. Align the control handle with the screw holes on the seat frame, and fix it using the removed screws. (A2 wrench)

5 	6 
Identify the left and right armrests (the armrest buttons should face the front of the seat). Secure the armrests to the seat cushion using the B screws (using the A1 wrench).	Fix the backrest to the tilt mechanism using C screws (A1 wrench).
7 	8 
Support to insert the wiring from the lumbar support into the backrest interface. Securely replace the decorative cover afterward.	Insert the cylinder into the tilt mechanism hole.

9 Before installation, remove the headrest screws pre installed on the backrest 	10 
Remove the pre installed screws of the headrest, after aligning the installation hole of the headrest with the backrest hole, first clip the upper part of the headrest into the backrest, then rotate it in the direction of the arrow, and finally fix the headrest.	Open the battery compartment on the right side of the seat cushion as shown, and insert the battery in the indicated direction. Caution: The battery terminals should face outward (or be oriented outward). Incorrect installation may cause malfunction.
11 	12 
The left side of the seat cushion houses the manual controller and magnetic charging port. Connect the adapter to activate all functions. Caution: Upon delivery, the power button under the seat is set to "On". If the chair does not function after connecting to power, check if the power button is turned on.	Installation complete. Congratulations, you are now a junior ergonomics engineer.

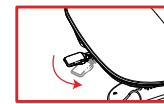
Operating Instructions



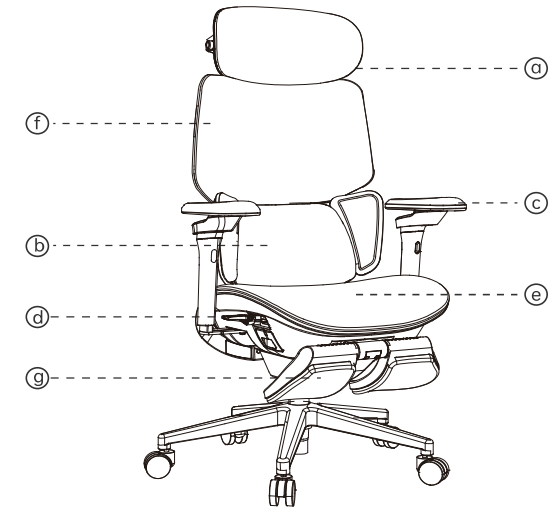
Pull the adjustment lever upward to raise or lower the seat.



Pull the adjustment lever backward to adjust the recline angle.



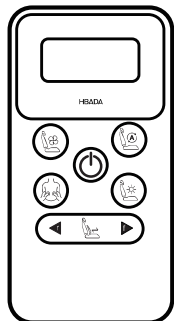
Push the adjustment lever forward to adjust the seat depth.



- a. Headrest height and swivel adjustment
- b. Smart lumbar support with vertical and depth adjustment, side-wing heating, lumbar massage, and a sedentary reminder
- c. Armrest height adjustment, 360° swivel, and flip-up capability
- d. Seat height, recline angle, and seat depth adjustment
- e. Occupancy sensor, seat ventilation, and long-lasting battery
- f. Backrest height adjustment
- g. Retractable footrest

Memory function: The chair will automatically restore to the previous smart lumbar support mode after a power restart.

Additional features: The 5-level smart lumbar support and sedentary reminder are activated automatically upon first use.



Tap to cycle through smart lumbar support settings.

A single tap activates the default 5-level smart lumbar support mode. Use the forward/backward buttons on the lumbar cushion to adjust intensity across 10 levels. The system remembers your last setting. Tap again to switch to manual mode. When smart lumbar support mode is active, the "L" icon in the status bar will illuminate.

(Note: Smart lumbar support mode and lumbar massage cannot be used simultaneously.)



Tap to cycle through lumbar massage settings; long press to activate the sitting reminder.

Tap once for Level 1 massage, twice for Level 2, and three times for Level 3. A fourth tap turns off the massage. Long press for 2 seconds to activate the sitting reminder; long press again for 2 seconds to deactivate it. The reminder alerts you every 45 minutes by activating Level 3 massage for five minutes. If you leave the chair for more than 2 minutes, the massage mechanism retracts automatically. The sitting reminder timer resets after each 45-minute interval or if you leave the chair for over 2 minutes. When the sitting reminder is active, the "L" icon in the status bar lights up.



Press and hold the button to move the lumbar support forward or backward; release to stop.

After selecting smart lumbar support mode, you can adjust the support level.



Tap to cycle through the seat ventilation settings.

Tap once to activate Level 1 ventilation, twice for Level 2 ventilation, and three times for Level 3 ventilation. Fourth tap turns off the ventilation function.



Tap to cycle through the lumbar heating settings.

Tap once to activate Level 1 heating, twice for Level 2 heating, and three times for Level 3 heating. Fourth tap turns off the heating function.

(The lumbar heating function lasts for 10 minutes; please reactivate if needed.)



Tap to activate the power on/off function of the manual controller

If the controller is not operated for 30 seconds, the screen of the controller will automatically turn off and the function will not be turned off. Press the power button to wake up the screen. Press the power button to turn off all functions and turn off the screen. Press the power button again to wake up the screen and control the functions normally. Every time it wakes up, the smart waist chasing and sedentary reminder functions are turned on by default.