G7 Pro - Windows Connection Tutorial

Article Guide:

- Wired Connection
- Receiver Connection

Wired Connection

1. Use the included Type-C cable to connect the controller to your computer, then press the Xbox button briefly to power on.

2. Once connected successfully, the Xbox indicator will remain solid.

Receiver Connection

1. Insert the receiver into the computer.

2. Toggle the controller's mode switch to the 2.4G mode, and press the Xbox button briefly to power on. Wait for the controller to connect.

3. Once connected successfully, the Xbox indicator will remain solid.



G7 Pro - Android Connection Tutorial

Article Guide:

- Bluetooth Connection

Bluetooth Connection

1. Toggle the controller's mode switch to the Bluetooth mode, and press the Xbox button briefly to power on.

2. Open the Bluetooth list on your phone, find the device named **GameSir-G7 Pro**, and click to connect.

3. Once connected successfully, the Xbox indicator will remain solid.

* If the connection is unsuccessful, press and hold the paring button on the controller to re-enter pairing status.



G7 Pro - Basic Function Introduction

Article Guide:

- Accessory Replacement Guide
- Connection State
- Operating Instructions

Accessory Replacement Guide



Connection State

Xbox Indicator	Description
Breathing	Reconnecting State *It can connect to previously paired devices.
Running Light Effect (Sequentially Lighting Up)	Paring State (Bluetooth Mode) *In this state, it can be discovered and paired with devices.
Solid	Connection Successful
Off	Power-off State *The controller will enter power-off state after 10 minutes of inactivity in 2.4G or Bluetooth mode.


Operating Instructions

Description	Operation
Power On/Off	Short press the Xbox button to power on. While powered on, press and hold the Xbox button for 5 seconds to power off.
Pairing	In Bluetooth mode, press and hold the pairing button for 2 seconds to enter forced pairing mode.
Preset Configuration Switching	M+Y Default Configuration M+B Configuration 1 M+A Configuration 2 M+X Configuration 3
Hair Trigger Mode	Enable/disable hair trigger mode Press and hold the M button + LT/RT button for 2 seconds 
Low Battery	When the battery is below 15%, the Xbox indicator will flash red.
Charging	You can charge the controller via the Type-C port or the charging station.

G7 Pro - Volume Adjustment


1. Hold the M button + the D-pad up/down to increase/decrease the main volume (11 levels in total) .

*A sound cue will be provided when adjusting to the maximum or minimum level.

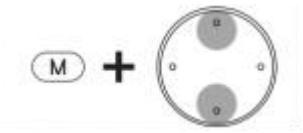


2. Hold the M button + the D-pad left/right to increase game volume (while decreasing voice volume) / decrease game volume (while increasing voice volume).


*A sound cue will be provided when adjusting to the maximum, medium or minimum level.

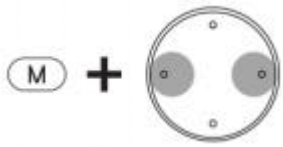


3. Mute Function: Press the mute button to enable the mute function; the mute indicator will turn solid red. Press the mute button again to disable the mute function (default state); the mute indicator will turn off. While the mute function is active, holding the mute button will temporarily disable it. Release the button to restore the mute function.

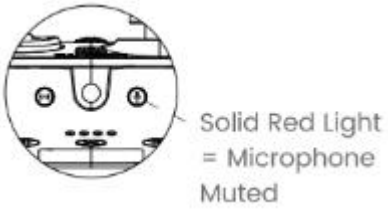

G7 Pro - Remappble Button Setting

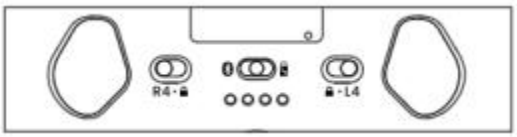

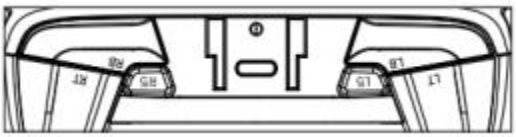

Set the remappable button value: Press and hold the M button + L4/R4/L5/R5 button, and the Xbox indicator will start flashing slowly. Press the button you want to map to the macro button, and the Xbox indicator will return to a solid light, indicating that the remappable button setting is complete.

* Within the setting mode, pressing the corresponding remappable button will clear its button value.

G7 Pro - Stick & Trigger Calibration

1. Set the trigger to analog mode, then press and hold  until the Xbox indicator starts flashing slowly.

2. Ensure that the LT & RT triggers and the left & right sticks are not being touched. Then Press the A button. The Xbox indicator will turn off.

3. Press the LT & RT triggers to their maximum travel for 3 times. Rotate the left & right sticks to their maximum angles for 3 times. Press the A button. A solid light on the Xbox indicator indicates that the calibration is complete.

G7 Pro - Controller Reset

If the controller encounters issues such as being unable to power on or off properly, you can use a small object similar to the size of a paperclip to press the Reset button inside the circular hole on the back of the controller. This will force the controller to power off.