

NV7

USER MANUAL

PHANTEKS |
VERSION 1.1



THANK YOU FOR CHOOSING

PHANTEKS

■ 1. INTRODUCTION

Introduction	5	Move Front I/O To Secondary Position	23
D-RGB Lighting Effects	6	D-RGB Cables	24
Exploded View	7	Installing Storage	25
Accessories	8	Internal Cable Management	27
Specifications	9	Installing LED Covers	28
		Installing GPU Support Bracket	30
		External Cable Management	31

■ 2. BUILD YOUR SETUP

Remove External Panels	10
Remove Covers	12
Motherboard Installation	13
Power Supply Installation	14
Fan & Radiator Positions	15
Fan & Radiator Installation	16
Airflow Configurations	20
Power Button & LED	21
Front I/O	22


■ 3. SUPPORT

Contact Us	32
Warranty	33

INTRODUCING THE PHANTEKS NV7

The Phanteks NV7 is a showcase full-tower chassis with a clean look from every side. It is the first installment of the new NV series, which is focused on showcasing your hardware in a premium build-quality chassis. Performance is uncompromised with Ultra-Fine Mesh panels while providing a clean and stylish look with the nearly seamless tempered glass front and left side panels.


THE PHANTEKS TEAM

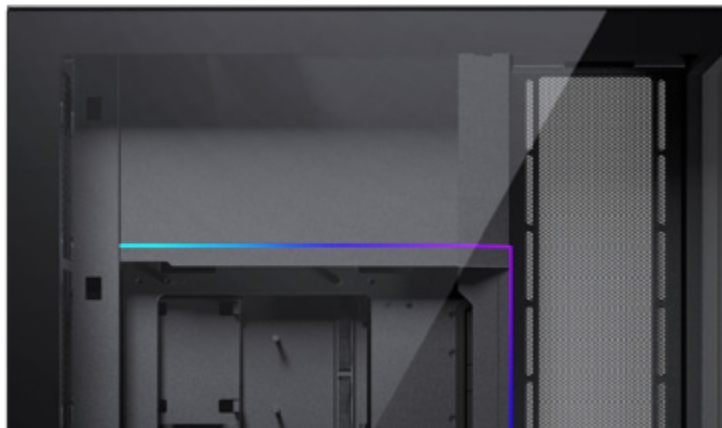

LIGHTING EFFECTS

NV7

The Digital-RGB lighting can be easily controlled with the 4 buttons on top of the chassis:

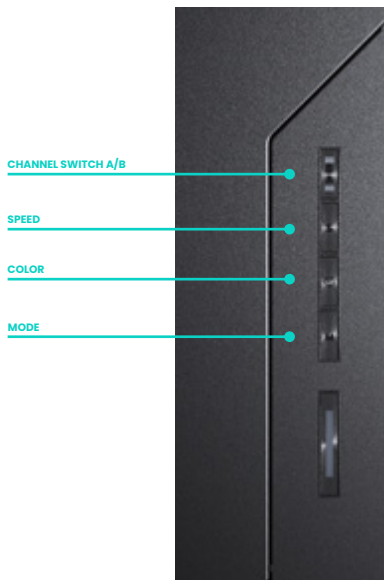

MODES


Solid



Rainbow



Breathing



Pixelate



Wave



Two-Tone



Fade



TURN OFF LEDs



Press and hold the MODE button for two seconds to turn off LEDs, press again to turn it ON

EXPLODED VIEW

NV7

PARTS

- 1 Chassis
- 2 Front glass panel
- 3 Right side mesh panel
- 4 Left glass panel
- 5 Top panel
- 6 Bottom fan bracket
- 7 Side fan bracket
- 8 Rear door
- 9 Bottom dust filter
- 10 Front I/O
- 11 GPU Support Bracket
- 12 Motherboard Cover
- 13 D-RGB Cover
- 14 Top I/O
- 15 Rear Mesh Cover
- 16 Airflow Cover



GPU SUPPORT BRACKET

Included in accessory box



AIRFLOW COVER


2x Included in accessory box




SCREWS



**SSD + MOTHERBOARD
SCREW**
34X



**MOTHERBOARD
STAND-OFF**
1X



**ANTI-SAG BRACKET
THUMB SCREW**
4X




**EXTRA RIGHT SIDE
PANEL SCREW**
1X



PSU SCREW
4X



HDD LOCKING SCREW
9X



**STAND-OFF REMOVAL
TOOL**
1X

OTHER ACCESSORIES

- 1x D-RGB Motherboard adapter cable
- 1x Microfiber Cloth
- 6x Zipties
- 1x Manual

SPECIFICATIONS

CASE SPECIFICATIONS

Dimension (DxWxH)	532 x 253 x 586 mm / 20.9 x 10.0 x 23.1 in
Form Factor	Full Tower
Materials	Steel, Tempered Glass front and side panels
Motherboard Support	ATX, micro-ATX, mini-ITX, E-ATX (up to 277 mm wide), SSI-CEB (up to 290 mm w/o cover)
Front I/O	Power switch, 1x USB 3.2 Gen2 Type-C, 2x USB 3.0, D-RGB Mode, D-RGB Color, D-RGB Speed, D-RGB Channel, Microphone/Headphone

PCI SLOTS & DRIVE BAYS

PCI Slots	8x
Internal 2.5"	6x
Internal 3.5"	2x

FAN	120mm	140mm
Side	4x	-
Top	3x	-
Bottom	3x	3x
Rear	2x	-

RADIATOR	120mm	140mm
Side	up to 360	-
Top	up to 360	-
Bottom	up to 360	up to 280
Rear	up to 240	-

INCLUDED ACCESSORIES

GPU Support Bracket	1x
Airflow Cover	2x
Toolbox	1x

CLEARANCE


GPU Length	450 mm / 17.7 in
CPU Cooler Height	185 mm / 7.3 in
PSU Length	255 mm / 10.0 in
Side 360 Radiator	Maximum size: 132 x 440 mm
Side 360 Radiator Thickness	65 mm (to GPU)
Top 360 Radiator	Maximum size: 132 x 440 mm
Rear 240 Radiator	Maximum size: 132 x 320 mm

01 OPEN REAR PANEL



Open the rear door by pulling it from the bottom right corner.

02 REMOVE GLASS SIDE PANEL

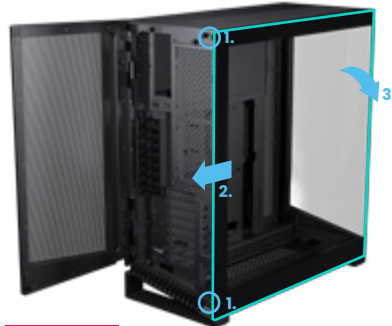


LOOSEN
THUMB SCREW 2x



Loosen the 2 thumb screws in the rear, slide the glass side panel to the rear and tilt it sideways to remove it.

03 REMOVE GLASS FRONT PANEL

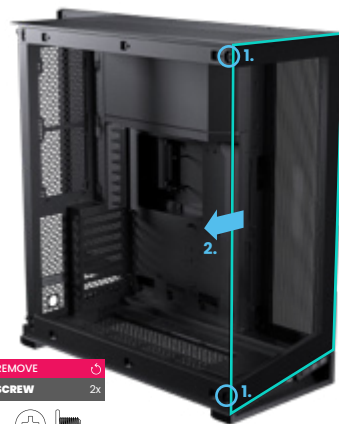

REMOVE
SCREW 2x




Unscrew the 2 screws from the left side and slide the panel to the left to remove it. Optionally, this panel can be left on during installation.

REMOVE EXTERNAL PANELS

NV7

04 REMOVE TOP PANEL

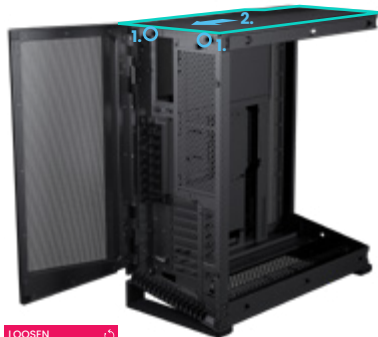

LOOSEN
THUMB SCREW 2x



Loosen the 2 thumb screws of the top panel in the rear. Slide the top panel to the rear to remove it.

05 REMOVE RIGHT SIDE PANEL



REMOVE
SCREW 1x



Remove the screw on the top and slide the right panel upwards to remove it.

06 REMOVE REAR DOOR




Optionally, remove the back door by sliding it upwards when it is in open position.

REMOVE COVERS


NV7

01 REMOVE D-RGB COVER

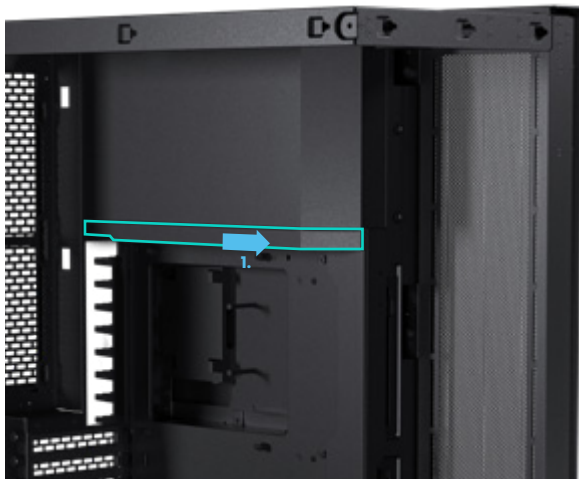

Slide the D-RGB cover to the front of the chassis to remove it.

02 REMOVE MOTHERBOARD COVER

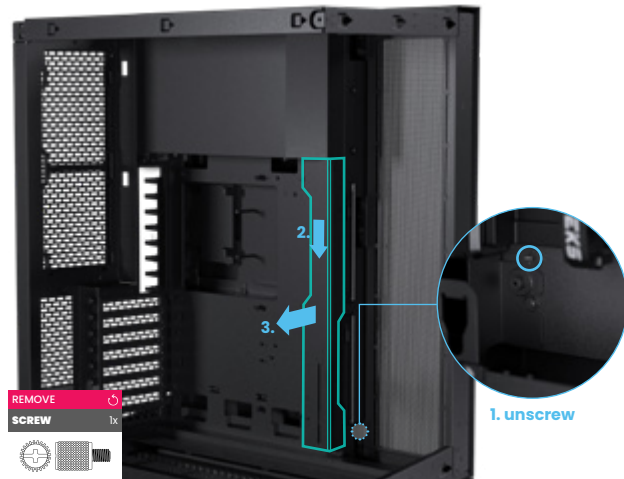

Remove the screw located on the right side of the chassis. Push the motherboard cover down to remove it.



INSTALL 
MB SCREWS 9x



01 ALIGN MOTHERBOARD

Align the motherboard with the screwholes on the chassis' motherboard tray.

02 SECURE MOTHERBOARD

Secure the motherboard with 9x motherboard screws.



PRO TIP

Use the included stand-off tool to easily remove and re-install the motherboard stand-offs for other motherboard form-factors




ATTENTION

For Micro-ATX and SSI-CEB check the motherboard instructions for stand-off locations.

01 INSERT PSU

Insert the PSU from the right side of the chassis.

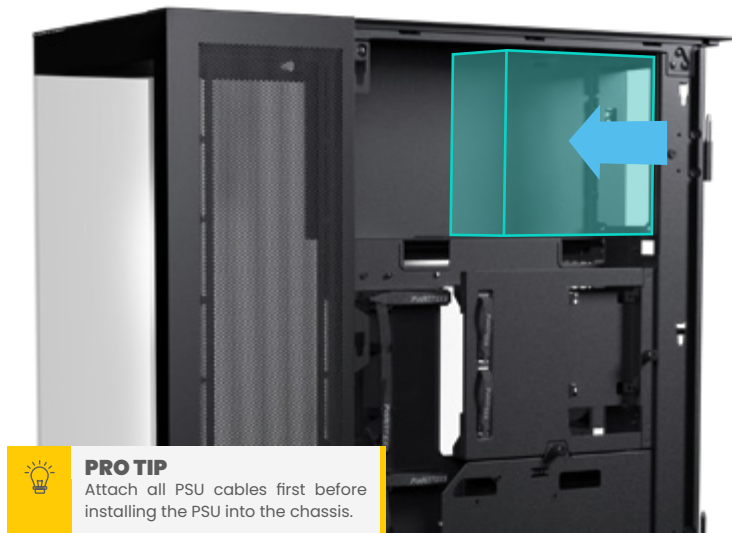

02 SECURE PSU

Secure the PSU from the rear with 4x PSU screws.



RADIATOR & FAN POSITIONS

NV7


RADIATOR POSITIONS

Side: up to 360

Top: up to 360

Bottom: up to 360/280

Rear: up to 240

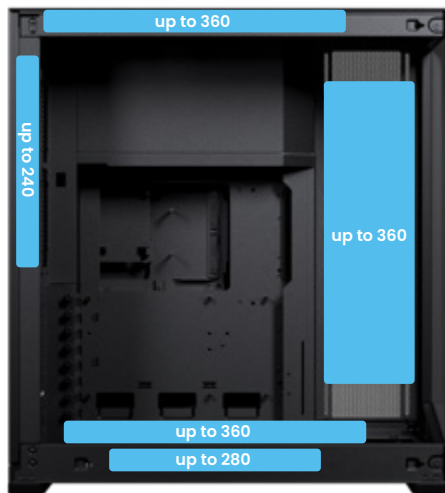


FAN POSITIONS

Side: 4x 120 mm

Top: 3x 120 mm

Bottom: 3x 120/140 mm

Rear: 2x 120 mm

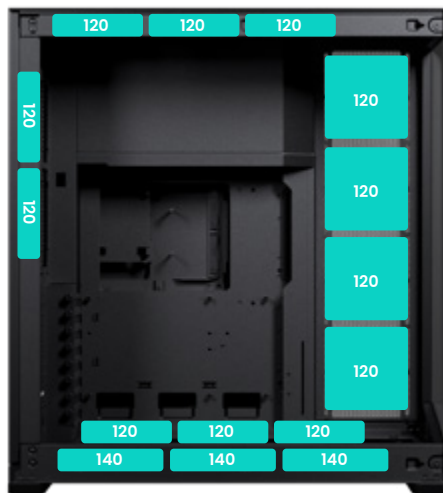

RECOMMENDED AIRFLOW CONFIGURATIONS

NV7


AIR-COOLED CONFIGURATION

Side: Intake

Top: Exhaust

Bottom: Intake

Rear: Exhaust

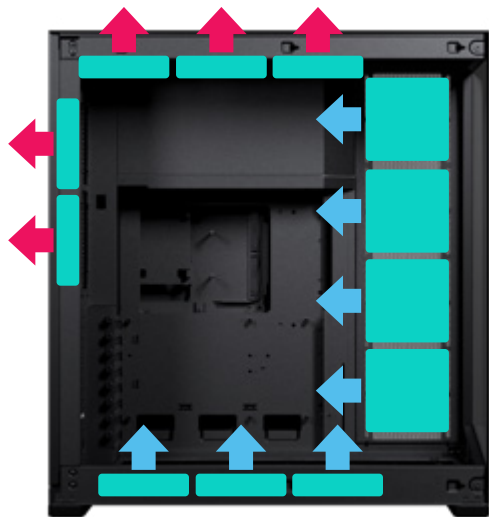


WATER COOLED CONFIGURATION

Side: Exhaust



Top: Exhaust

Bottom: Intake

Rear: Exhaust

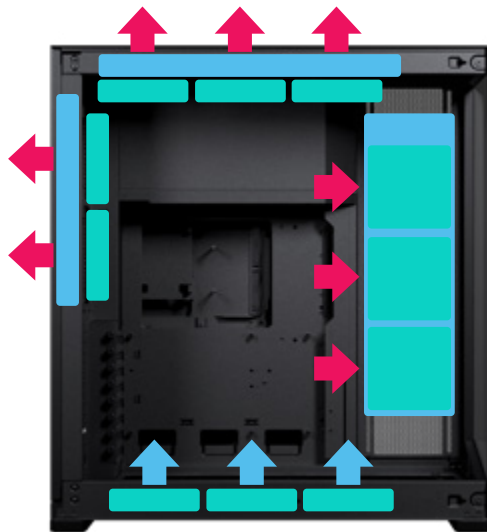

SIDE FAN/RADIATOR BRACKET

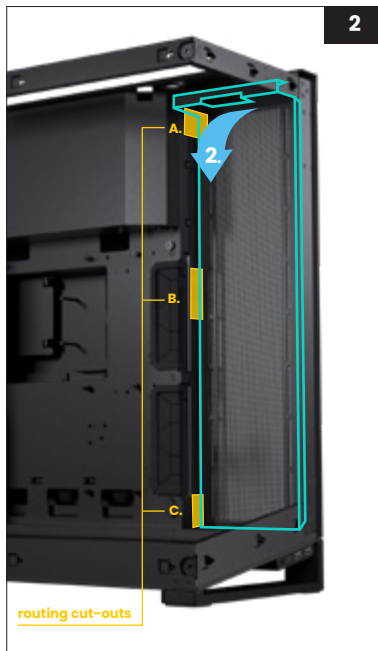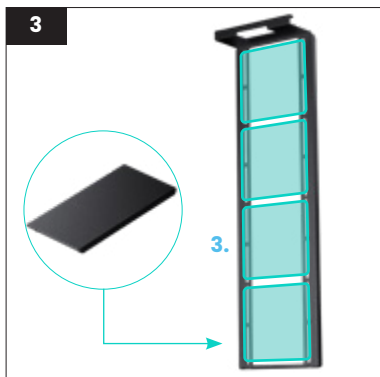

01 REMOVE SCREW

Remove the screw located on the top.

02 PULL & TAKE OUT BRACKET

Remove the bracket by pulling the handle at the top of the bracket and take it out.

03 INSTALL FANS/RADIATOR

Install up to 4x 120 fans/360 radiator on the bracket.

04 INSTALL SIDE BRACKET

Re-install the bracket and secure it with the screw located on the top.



Use the 3 cut-outs to route all fan cables.



PRO TIP

Use the provided airflow cover for optimal airflow. When used, the airflow will be closed off.

BOTTOM FAN/RADIATOR BRACKET

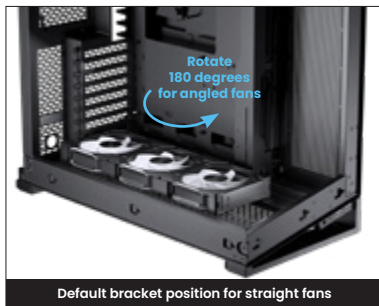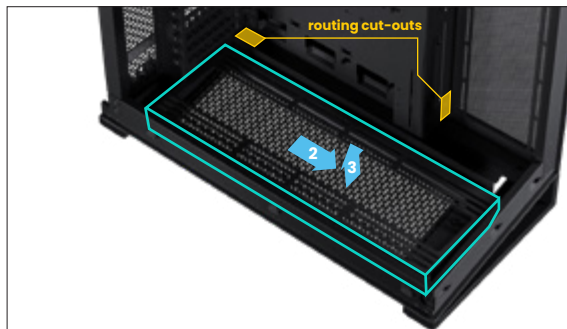

01 REMOVE BOTTOM BRACKET

Release the bracket by removing the rear thumb screw. Slide the bracket to the front to remove it.

02 INSTALL FANS/RADIATOR

Install up to 3x 120mm / 3x 140 mm fans and/or 280/360 radiator on to the bracket.

03 RE-INSTALL BOTTOM BRACKET

Re-install the bracket by sliding it towards the rear and secure it with the thumb screw.

It is possible to install the bracket the other way around for angled fans.

Fan cables can be routed through the cut-outs on the rear and side.

REAR FAN/RADIATOR POSITION

The rear has space for up to 240 radiator and 2x 120 fans. The fans can be installed in front of the rear panel while the radiator can be installed behind the rear panel.

01 REMOVE REAR MESH PANEL

Remove the screw on the rear and remove the mesh panel.


02 INSTALL FANS/RADIATOR

Install up to 2x 120 fans on the inside of the rear chassis. A 240 radiator can be installed on the outside of the rear chassis.

03 RE-INSTALL REAR MESH PANEL

If no radiator is installed, re-install the rear mesh panel.

Fan cables can be routed through the cut-outs on the rear.

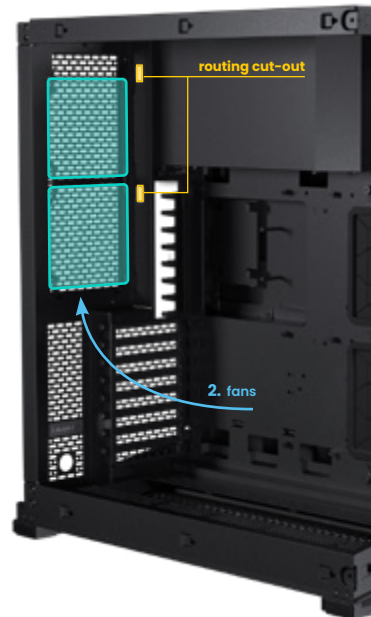

TOP FAN/RADIATOR POSITION

01 INSTALL FANS/RADIATOR

Up to 3x 120 fans/360 radiator can be directly installed into the top of the chassis.

Fan cables can be routed through the cut-outs on the top.




01 CONNECT POWER BUTTON

Connect the power switch module to the motherboard.



power switch/power LED module

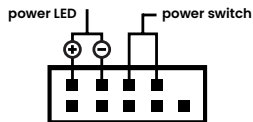

motherboard header diagram



I/O INTERFACE

- USB 3.1 GEN 2 TYPE-C (1x)
- USB 3.0 TYPE-A (2x)
- Headphone/microphone (1x)

CONNECT I/O CABLES TO MOTHERBOARD


01 CONNECT USB 3.1 GEN 2 TYPE-C



02 CONNECT USB 3.0 TYPE-A



03 CONNECT HD AUDIO

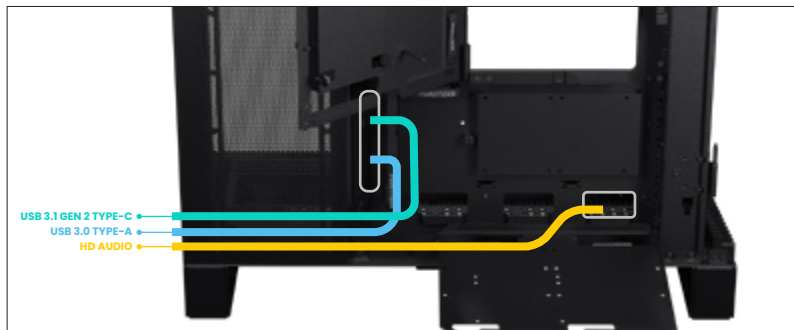

MOVE FRONT I/O TO SECONDARY LOCATION

NV7

STEPS TO MOVE I/O TO THE REAR

01 REMOVE BOTTOM FAN BRACKET

Remove the bottom fan bracket.

02 REMOVE SCREWS

Unscrew 2x screws located inside the chassis.

03 SLIDE I/O UNIT OUT

Slide the I/O unit forward and remove it.

04 PUSH OUT COVER




Push the cover, located on the rear bottom, up to remove it.

05 SLIDE I/O UNIT IN

Pull the cables through the cutout and slide the I/O unit into the rear position.

06 SECURE I/O UNIT


Secure the I/O unit in its new position with 2x screws.

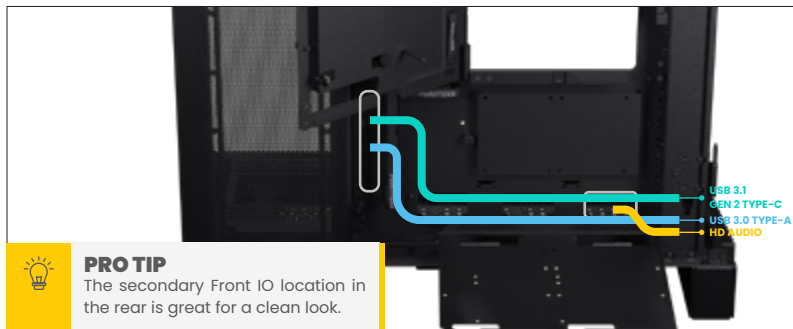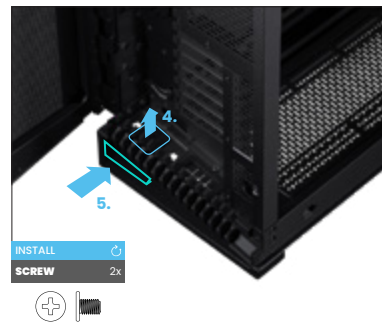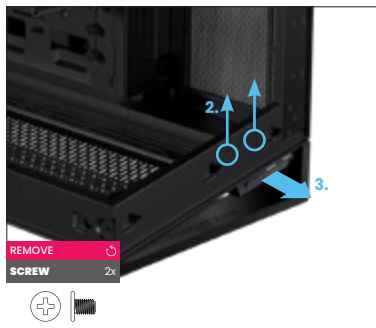

D-RGB CONTROLLER

The built-in D-RGB controller has 2 channels (A & B). Both channels, each with 2 available D-RGB ports, can be controlled separately with the control buttons on the front I/O.

max 7A per channel, max 4A per port

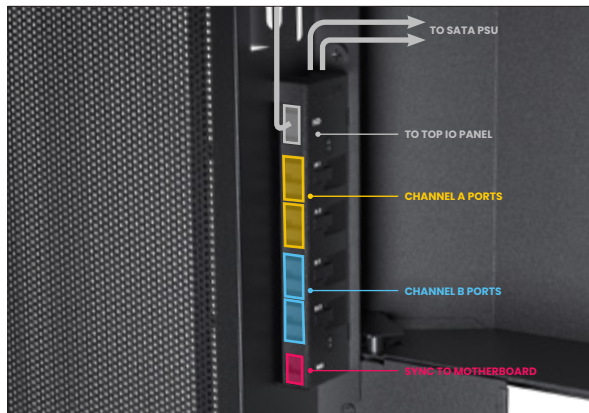


LIGHTING EFFECTS & CONTROLS

D-RGB Lighting effects and control instructions are described on page 6.


01 CONNECT THE SATA CABLES

Connect the 2x SATA cables to the power supply.




02 EXPAND WITH OTHER D-RGB PRODUCTS

To Phanteks Digital-RGB products (JST connector)



03 SYNC LIGHTING TO MOTHERBOARD (OPTIONAL)

The D-RGB to motherboard cable is included in the accessory box.

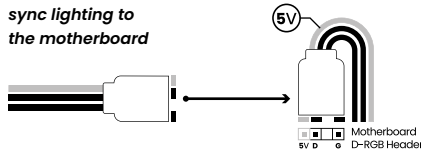


TOP DOOR STORAGE

01 OPEN TOP DOOR

Loosen the thumb screw to open the top door.

02 INSTALL 2.5" DRIVES

Install up to 2x 2.5" drives with 2x SSD screws per SSD.

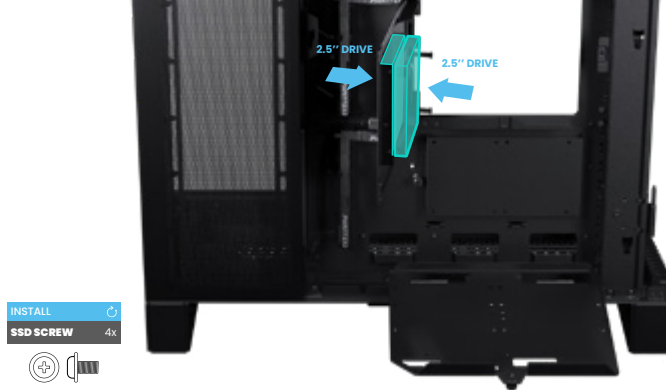

BOTTOM DOOR STORAGE

01 OPEN BOTTOM DOOR


Loosen the thumb screw to open the door.

02 INSTALL DRIVES


The bottom door can be used for one of the following storage options:

1x 3.5" + 4x 2.5" | 4x 2.5" | 2x 3.5"

OPTION A - 1X 3.5" + 4X 2.5"

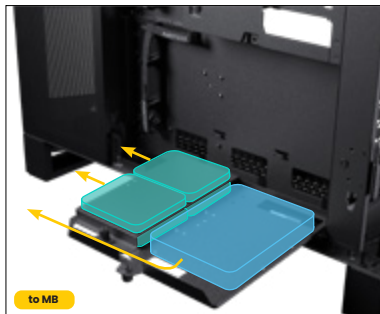


OPTION B - 4X 2.5"

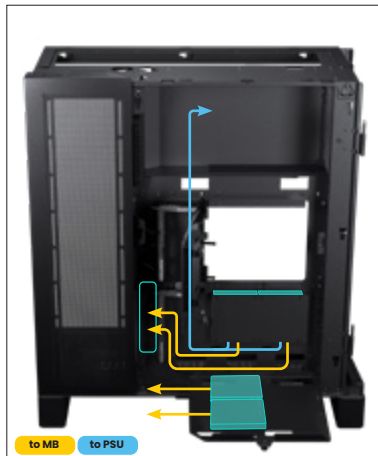

01. Reposition the 2.5" drive bracket to the rear of the motherboard.
02. Install 2x 2.5" drives on the door and 2x 2.5" drives on the bracket


OPTION C - 2X 3.5"

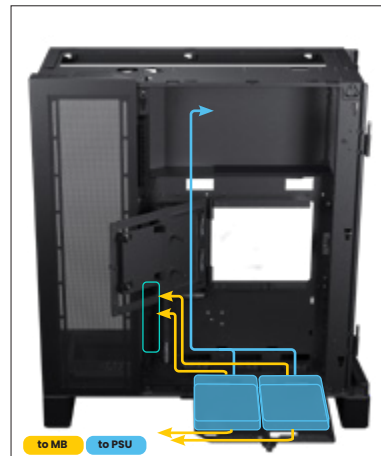


01. Remove the 2.5" drive bracket completely.
02. Install 2x 3.5" drives with cables routed to the top

PSU CABLE MANAGEMENT

The PSU cables can be routed like the image below for clean cable management. Open the top cover door to loop the CPU & MB cables to get rid of excessive cable length.

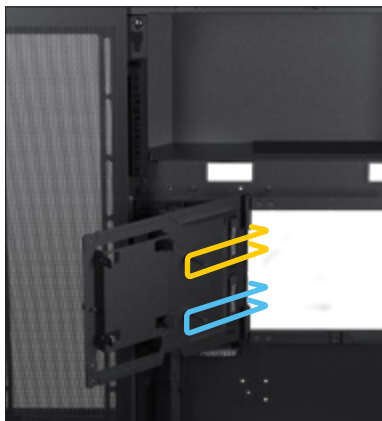


Loop excessive cable length on the inside of the top cover door.

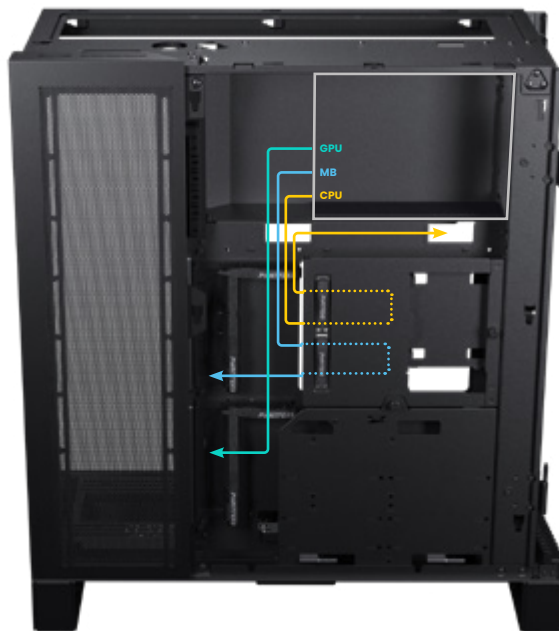

01 INSTALL MOTHERBOARD COVER

The motherboard cover can be installed in two ways:

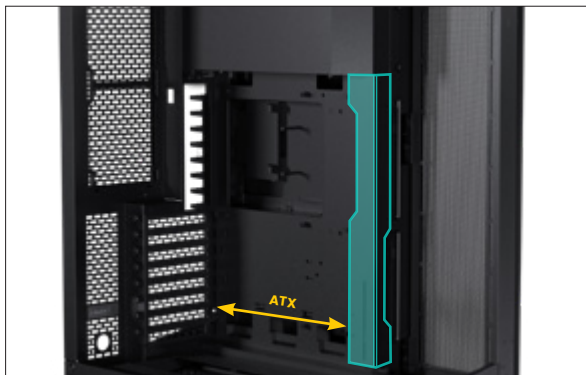


Option 1: Default

The first option covers a bit more of the cables attached to the motherboard, and is a great fit for standard sized ATX motherboards.

Option 3: Remove Cover


For even larger motherboards and maximum clearance, it is recommended to remove this cover completely.

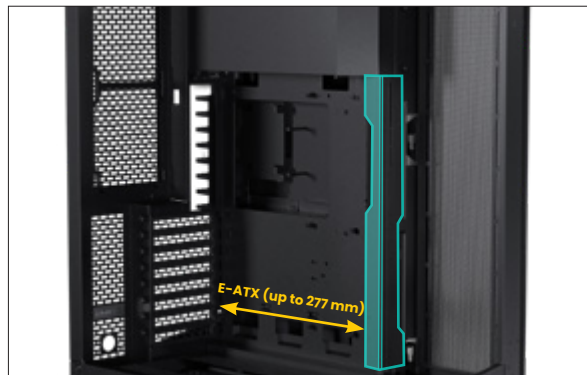


Option 2: Reversed

For the second option, the cover is installed in reversed position. This covers less of the motherboard and allows more clearance for E-ATX motherboards (up to 277 mm).

02 INSTALL D-RGB COVER

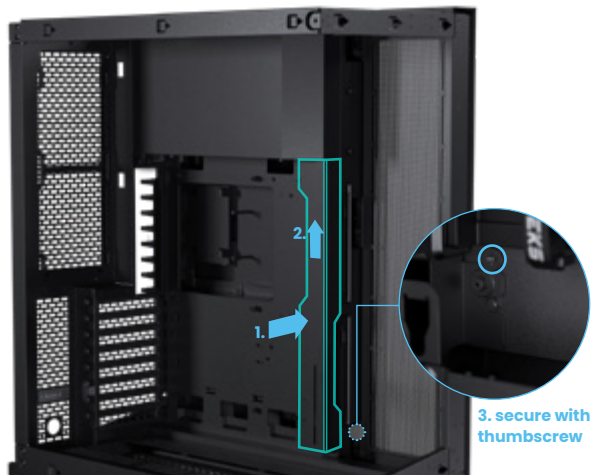

After choosing the preferred position, align the motherboard cover (1) and slide upwards (2). Secure it with the thumb screw through the right side of the chassis (3).

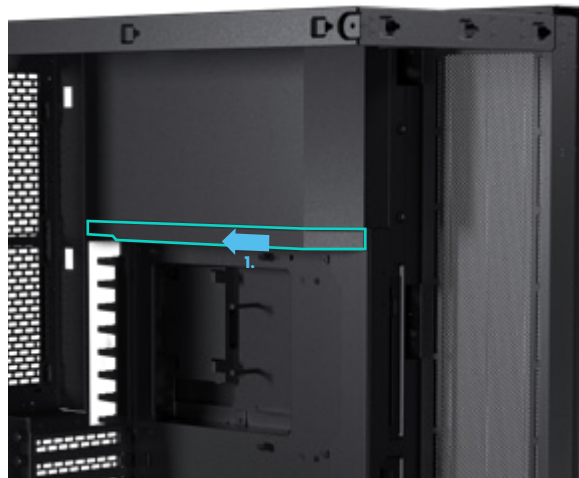


Slide the D-RGB cover to the rear of the chassis to install it.

INSTALLING GPU SUPPORT BRACKET (OPTIONAL)

NV7

01 INSTALL BRACKET

Install the GPU support bracket on the motherboard cover with 1x thumb screw.




02 ADJUST HEIGHT

Adjust to the correct height for your GPU and use the thumb screw to secure it.

03 ADJUST DEPTH

Adjust the depth of the bracket to hold the GPU tightly and lock with 1x thumb screw underneath the bracket.

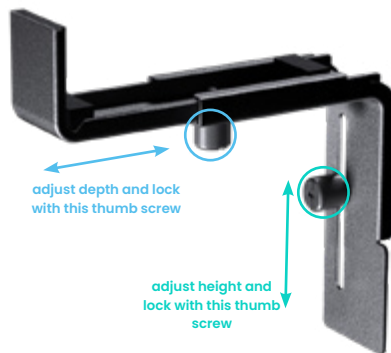

PRO TIP

Use the tie point on the bracket to tie down GPU cable for a clean routing


CABLE LANES

External cables can be managed with the cable lanes behind the rear door. The left lane is larger and can be used for thick cables. The other three lanes are smaller and made for thin cables.



VELCRO TIE

Use the velcro tie on the bottom to tie all cables down to the chassis.

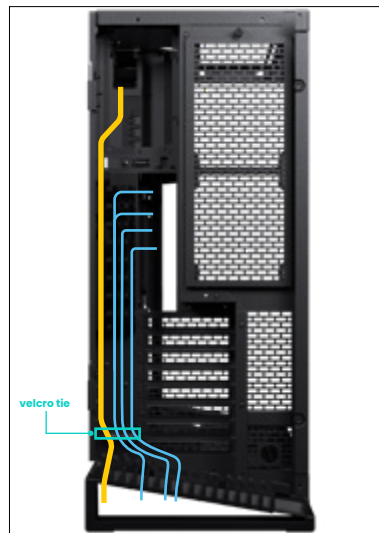

COMB OR GROMMET

There are two options for the cables to leave the case:

Option 1: Rear comb

The rear comb can be used to separate each cable to leave the case neatly.



Option 2: Bottom grommet

Alternatively, the grommet on the bottom of the chassis can be used to lead the cables out.



INTERNATIONAL

RMA & Technical Support

Internationaler RMA und technischer Support | RMA international et support technique | RMA internacional y soporte técnico | 国际 RMA 和技术支持

E-mail

support@phanteks.com

AMERICAS

RMA & Technical Support

Hours

Monday - Friday
09:00 - 05:00 PST

Phone Number

+1 (909) 598 2115

E-mail

support@phanteksusa.com

WARRANTY

Garantie | Garantie | Garantía | 保修单

1. I/O Ports

2 Years

2. LED Lighting

2 Years

3. Buttons

2 Years

4. Chassis

5 Years

5. External Panels

5 Years

EN

For the latest information on the product, manual, service and warranty please visit www.phanteks.com

DE

Die neuesten Informationen zu Produkt, Handbuch, Service und Garantie finden Sie unter www.phanteks.com

FR

Pour les dernières informations sur le produit, le manuel, le service et la garantie, veuillez visiter www.phanteks.com

ES

Para obtener la información más reciente sobre el producto, manual, servicio y garantía, visite www.phanteks.com

CN

有关产品、手册、服务和保修的最新信息, 请访问 www.phanteks.com

SAFETY INFORMATION

In order to achieve maximum safety, we suggest that you adopt the following guidelines:

1. Place the product on a clean and stable surface that allows adequate air ventilation.
2. Don't use or place the product and any of its components near water, moisture, or other wet surfaces; or place the product near any heat, open flame, or other hot surfaces such as radiators, stoves, fireplaces, and candles.
3. Use caution when operating the desktop PC to avoid electrical shock or damage, such as unplugging the power supply during thunderstorms, ensuring that your hands are dry before using (and handling) the desktop PC, keeping it away from any source of liquid and/or heat source, and using all other reasonable precautions needed under the circumstances.
4. When connecting external devices to your desktop PC, carefully plan how the wires will be placed. Protect any connected cables from being trod on or pinched, particularly at plugs, convenience receptacles, or the point where they exit from.
5. Take extra caution when handling/removing/reattaching glass components. Once removed, place the glass component on a stable surface first before proceeding.
6. When unplugging any connected devices and/or cables, always pull the cable or device's plug or connector. Don't forcefully tug on its cord.
7. Don't place any heavy items on top of the product.
8. Make sure that the desktop PC is off, unplugged from the outlet, and that all connected devices are powered off and unplugged (if any) before installing or uninstalling any internal component to and/or from the desktop PC or product.



FR

Cet appareil se recycle

REPRISE
À LA LIVRAISON



À DÉPOSER
EN MAGASIN



À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !



The **WEEE symbol** indicates that this product must not be disposed of with normal household waste. Through the correct disposal of this product, you will help protect the environment. For more information on the disposal of this product, please contact your local municipality, your waste disposal service or the shop where you purchased the product.

Phanteks Taiwan Inc.

11F., No. 150, Jian 1st Rd.,
Zhonghe Dist.
New Taipei City 235

Importer EU

Axpertec Int. B.V. (EU)
Sydneystraat 33
3047 BP Rotterdam
The Netherlands

Importer US

Axpertec Inc. (US)
20465 E Walnut Dr. N
City of Industry, CA 91789
USA

FOLLOW US

SOCIAL MEDIA



Instagram

Phanteks



Facebook

Phanteks



YouTube

Phanteks



Twitter

@phanteks

PHANTEKS